GIBRALTAR BUILDING PRODUCTS

INSTALLATION GUIDELINES

GABLE LOUVER

Flange Front Gable Louver - used for existing walls

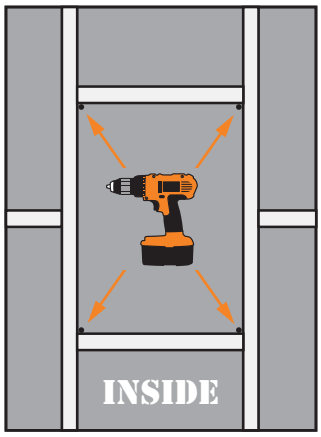

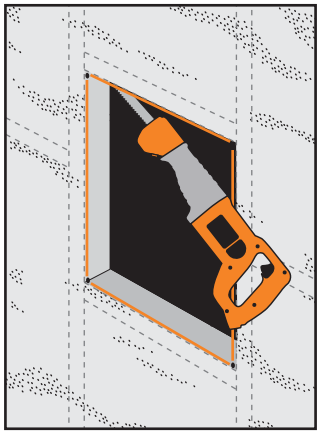

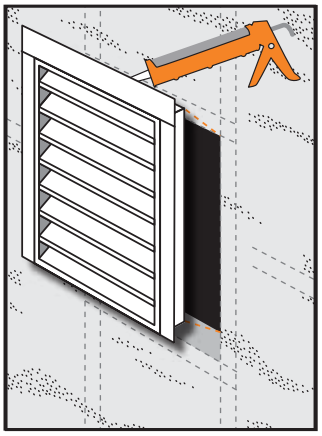

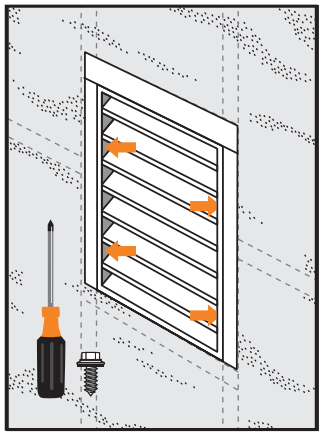

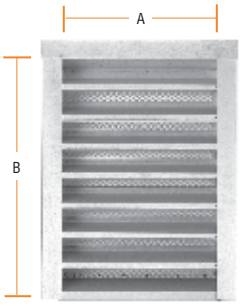

1) Frame opening 1/4" larger than vent body size and drill pilot holes in corners from inside of wall.

2) Mark straight lines between pilot holes and cut rough opening from from exterior wall

3) Apply sealant around inside of flange

4) Insert vent into opening and secure with screws (2 ea. side). For a cleaner finish, fasten screw through sides between blades.

Size A x B	N.F.V.	Rough Opening	Pack QTY.
12 in. x 12 in.	63 Sq. In.	12.25 in. x 12.25 in.	10
12 in. x 14 in.	65 Sq. In.	12.25 in. x 14.25 in.	10
12 in. x 18 in.	93 Sq. In.	12.25 in. x 18.25 in.	10
12 in. x 24 in.	118 Sq. In.	12.25 in. x 24.25 in.	10
14 in. x 12 in.	65 Sq. In.	14.25 in. x 12.25 in.	10
14 in. x 18 in.	110 Sq. In.	14.25 in. x 18.25 in.	10
14 in. x 24 in.	147 Sq. In.	14.25 in. x 24.25 in.	10
14 in. x 30 in.	185 Sq. In.	14.25 in. x 30.25 in.	2
18 in. x 18 in.	133 Sq. In.	18.25 in. x 18.25 in.	2
18 in. x 24 in.	190 Sq. In.	18.25 in. x 24.25 in.	5
18 in. x 30 in.	221 Sq. In.	18.25 in. x 30.25 in.	2
20 in. x 24 in.	197 Sq. In.	20.25 in. x 24.25 in.	2
24 in. x 18 in.	190 Sq. In.	24.25 in. x 18.25 in.	5
24 in. x 24 in.	253 Sq. In.	24.25 in. x 24.25 in.	5
24 in. x 30 in.	317 Sq. In.	24.25 in. x 30.25 in.	5
36 in. x 18 in.	266 Sq. In.	36.25 in. x 18.25 in.	2